




Golden **ROD**tronics  
13401 West 43<sup>rd</sup> Drive  
Golden Colorado  
80403  
Phone 303-423-8597  
Fax 303-420-4575



## Anti Theft Automatic Battery Disconnect

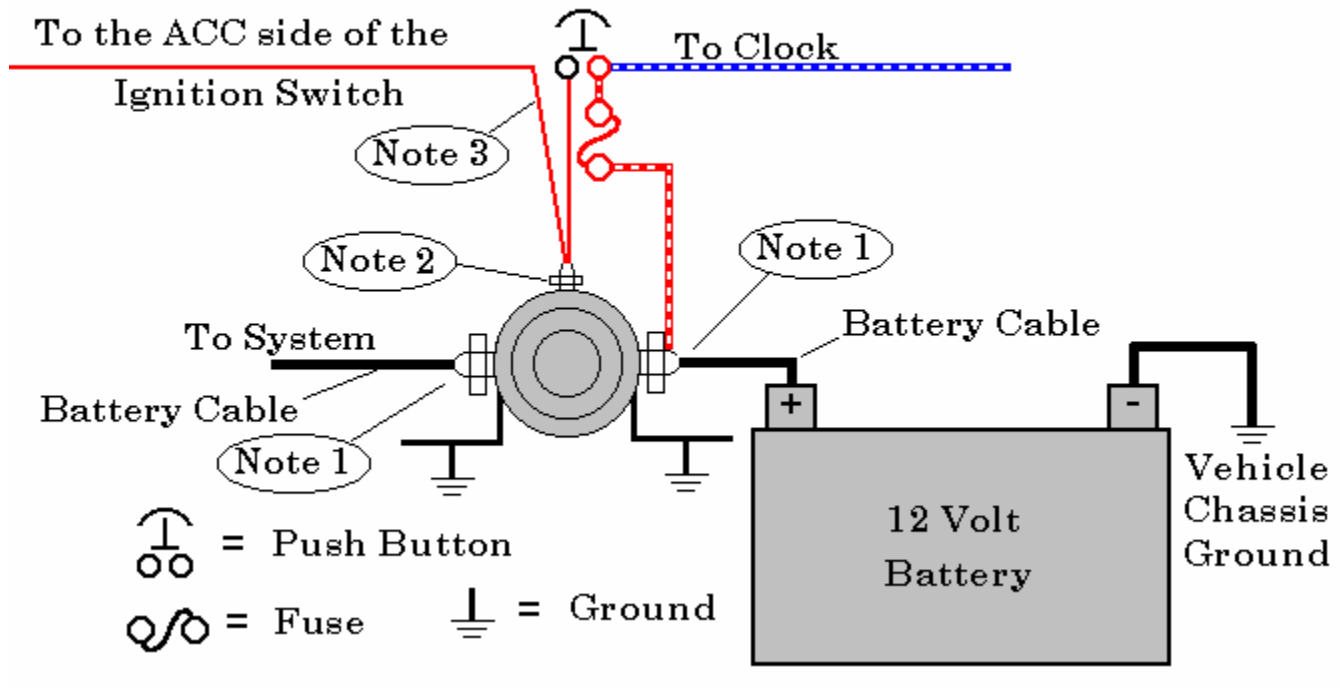

CONGRATULATIONS! You have just purchased one of the finest Anti-Theft Battery Disconnect units on the Market.

You have seen all the other battery switches on the market today. What makes Golden RODtronics special? It's automatic, and you'll **NEVER** forget to disconnect the battery because the unit remembers for you. That's what makes this unit a perfect anti-theft device. All you have to remember is to press and hold the button when starting your car (a thief won't know about the button).

### Installation

**First and most important: unhook the ground cable from the battery !!!**

1. Mount the unit in line with your positive battery cable. Cut the cable and install new cable ends (not supplied) that will bolt to the unit (as shown in the drawing Note 1).
2. The unit is self-grounding. **Make sure it is bolted to a grounded surface.** If not run a wire from the mounting bolt to a GOOD GROUND.
3. The Red/White wire with the 5-amp fuse bolts to the battery side of the unit, use the large ring connector.
4. Attach the small ring connector (black/red wire) to the top terminal (see drawing note 2).
5. Attach the Black wire to the ACC side of the ignition switch (see drawing note 3).
6. Attach the Blue/White to the clock or other low amp accessory that has to have constant power. If other accessories need constant power, run a wire from the positive side of the battery with the appropriate size wire. If the blue wire is not used, tape the end with electrical tape and place it out of the way.

**Your Automatic Battery Disconnect is now hooked up. Push and hold the button as the key is turned to start your car, let go of the button after the key returns to the run position. When the key is turned off the system will disconnect the battery automatically. If you try to start the car without pressing the button at the same time, IT WILL NOT START.**

Because Golden RODtronics cannot be assured that the Anti-Theft Battery Disconnect system was installed as instructed, Golden RODtronics liability is limited to the replacement of the Anti-Theft Battery Disconnect system. The purchaser signifies his/her agreement with the warranty, and the limited liabilities of Golden RODtronics stated herein, by the attempted or complete installation of this product.